 





I'm not robot

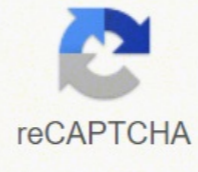

Continue

 SINGER®

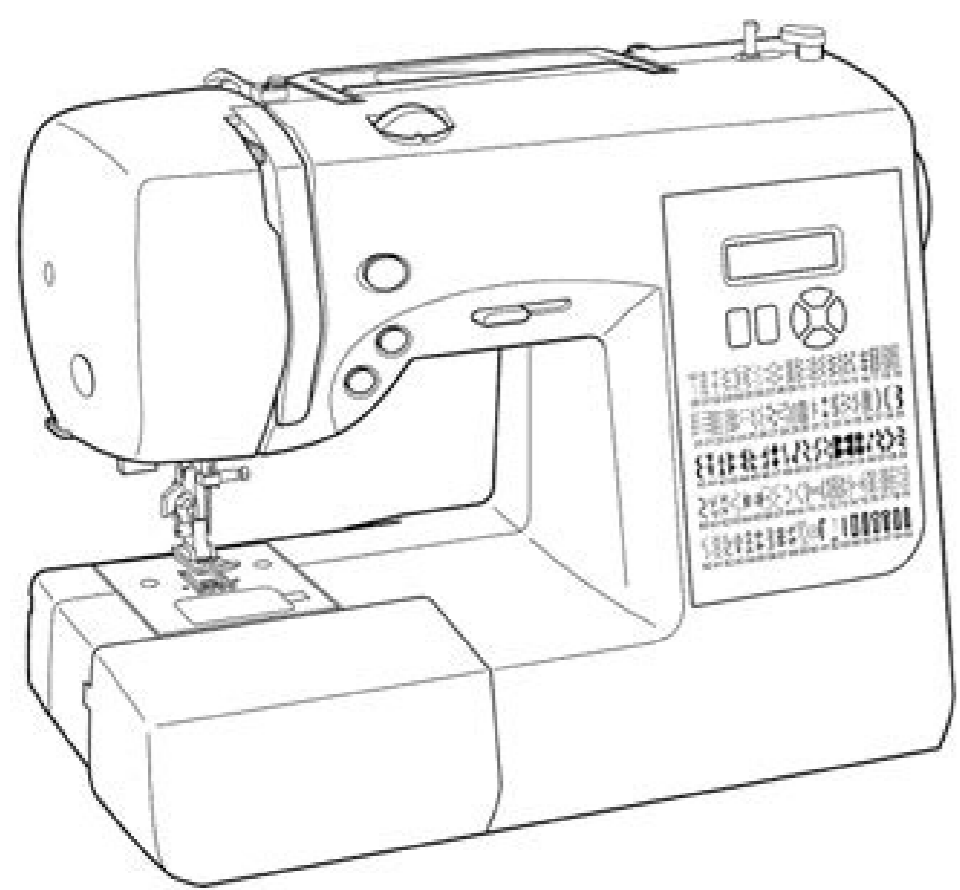

7258

INSTRUCTION MANUAL MANUEL D'INSTRUCTION MANUAL DE INSTRUCCIONES

cleaning the machine

 
Your machine will serve you perfectly for many years if you take a few moments of your time to keep it clean. How often you will need to clean the machine will depend on how often you use it.

CAUTION: Before cleaning your machine, disconnect power-line plug from electrical supply.


- Remove lint or fluff from exposed parts. With a soft cloth, clean:
 - Tension discs, take-up lever, and thread guide.
 - Presser bar and needle bar.
 - Bobbin case. (If there is an excessive amount of lint in the area, remove the bobbin case for cleaning. See page 54 for instructions.)
 - Machine surface. (If necessary, dampen the cloth and use a mild soap.)
- Remove face plate as instructed on page 53, and clean area behind it with a lint brush.
- Remove needle plate as instructed on page 53, using the screwdriver to clean the bottom of the area behind the needle plate and slide plate.
- After cleaning, apply SINGER® oil at points indicated on these pages.
- Adjustment: Once every year under normal conditions, clean and lubricate all moving or sliding machine components to ensure freedom of movement and to prevent metal parts from becoming worn. To remove top and bottom covers, follow instructions on page 53.

A lint brush designed for this purpose is available by separate purchase at your local Singer Sewing Center.

52

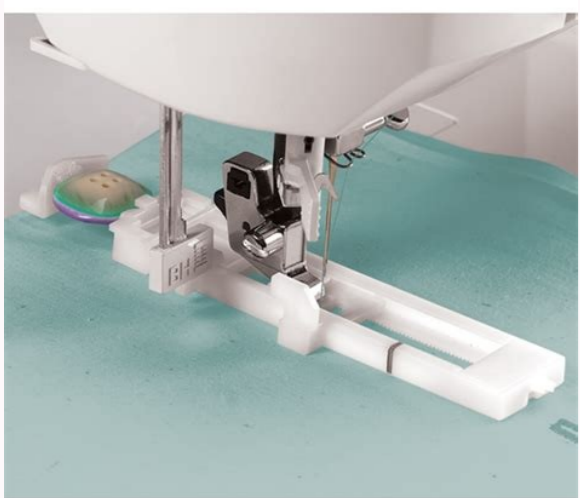

INSTRUCTION MANUAL FOR SEWING MACHINE

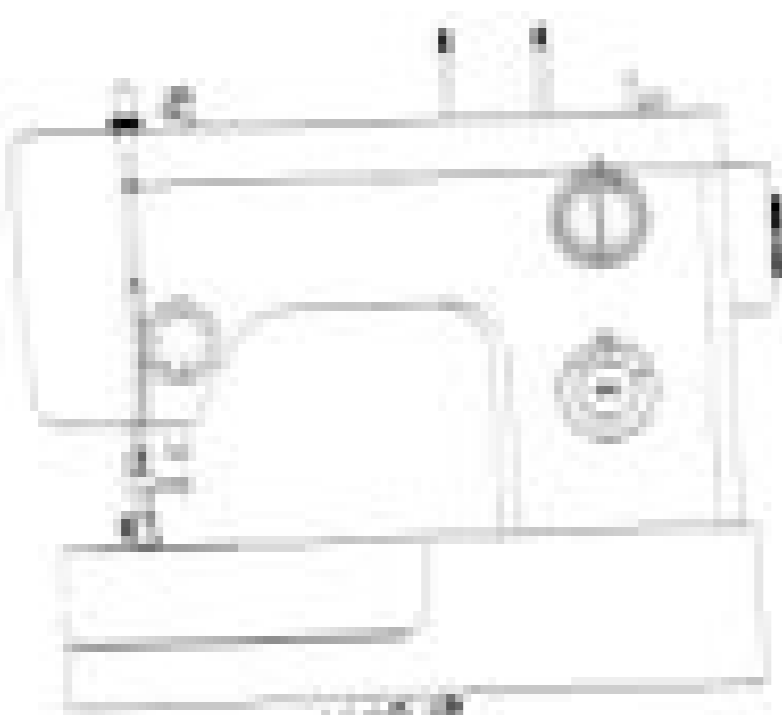 

WHITE

